

Stepper motor Driver / Kann-K17c motor driver PCB Second Generation

KannMOTION series

Product description

- Stepper motor driver for bipolar motors
- Integrated magnetic position encoder
- Motor drive up to 36V / 2.8A ¹⁾
- Capable for different motor and control voltages



Interfaces

- CANOPEN



Benefits / Software

- Closed loop operation
- Fully controllable over CANopen
- Updates, documents, tutorials and videos easy accessed at www.kannmotion.com

Technical data (Maximum ratings)

Rated supply voltage (Motor)	12 to 36 VDC
Rated supply voltage (Logic)	6 to 30 VDC
Max. motor phase current ¹⁾	2.8 A
Ambient temperature range	-10 to +40°C
Connection interface	JST 6 pole / B6B-EH
Connection motor	JST 4 pole / B4B-EH
Position control accuracy	±1° ²⁾
Motor control mode	Micro stepping


Ordering information

Part number	Description	Accessories
100 498 . xxx	Kann-K17c motor driver PCB <CANopen>	

1) Might be limited in time, restricted by losses! <Chip temperature>, take care about PCB cooling depending on application

2) Depending on mechanical positioning of the magnet

Dimensions (in mm)

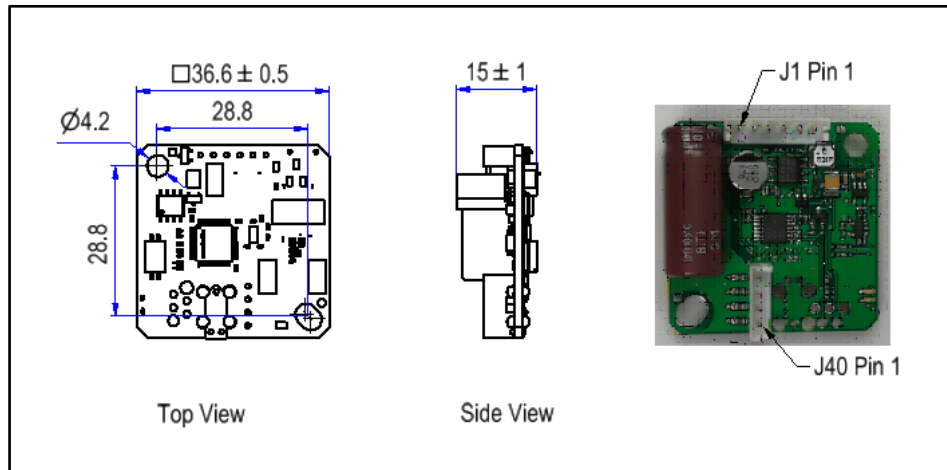

Connection terminals J1

Pin	Description	Nominal	Absolute max	Comment
1	V_{motor}	24 VDC	36 VDC	Supply of motor drive (Power)
2	V_{in}	24 VDC	30 VDC	Supply of PCB logic, also for logic outputs
3	CAN-H	3.5 V	$\pm 24V$	CAN bus signal (not terminated)
4	CAN-L	1.5 V	$\pm 24V$	CAN bus signal (not terminated)
5	DIN	3.3V / 5V / 12V / 24V	30V	Thresholds defined in firmware
6	GND	-	-	Reference

Software Configuration of Input Thresholds

Setting	V_{IH} (High level input voltage)	V_{IL} (Low level input voltage)
SPS_24V	>15.0	<5.0
SPS_12V	>7.5	<2.5
TTL_5V	>2.7	<1.5
TTL_3V3	>2.0	<1.0

Connection terminals J40

Pin	Description	Comment
1	A-	Motor phase A+
2	A+	Motor phase A-
3	B+	Motor phase B+
4	B-	Motor phase B-

Proper use



Do not connect or disconnect motor during operation!

Motor cable and motor inductivity might lead to voltage spikes when the motor is disconnected / connected while energized. These voltage spikes might exceed voltage limits of the driver MOSFETs and might permanently damage them. Therefore, always disconnect power supply before connecting / disconnecting the motor



Keep the power supply voltage below the upper limit!

Otherwise the driver electronics will seriously be damaged! Especially, when the selected operating voltage is near the upper limit a regulated power supply is highly recommended.



Check your mechanical system, is it able to drive the motor, avoid motor being used as generator

Every motor could be operated as an voltage generator, so take care about generated voltage, this might damage your electronics by overvoltage. Add some voltage limiter units to keep supply voltage in range.

Contact information

Adlos AG
Föhrenweg 14
FL-9496 Balzers

Thomas Vogt
Thomas.Vogt@adlos.com
Tel: +423 263 63 63

Countries: CH, A, LI, SK, IT
www.adlos.com

KOCO MOTION GmbH
Niedereschacher Straße 54
D-78083 Dauchingen

Olaf Kämmerling
O.Kaemmerling@kocomotion.de
Tel: +49 7720/995858-0

Countries: DE, BE, NL, LU
www.kocomotion.de

Freigabe Protokoll:

Was	Wer	Datum	Unterschrift
Elektrische Daten Stimmen die Werte in den Tabellen und im Text. Einheiten.			
Mechanische Daten Stimmen die Abmaße, Toleranzen. Sind alle Masse drauf. Steckerbezeichnungen korrekt			
Bilder Sind es die richtigen Bilder. Sind sie Scharf. Kann man erkennen was erkannt werden muss.			
Format. Zeilenabstände, Fett, Grösse Font etc.			
Text und Rechtschreibung Ist der Text sinnig. Fehler in Rechtschreibung			
ERP Daten Stimmen die Nummern und der Text von den Beschreibungen. Stimmt das Zubehör			
Freigabe Erstellen des Dokumentes.			
Ablage in ERP, Fileordern und Webseite			

Fehler in diesem Dokument eintragen. Jeder bitte nimmt eine andere Farbe. Die Person, die für die Freigabe verantwortlich ist, erstellt das fertige Dokument.